



04 Mounting the Inverter


Lift the inverter, hang the back rail on the fixed wall bracket carefully.
Fix the grounding terminal to the PE wire with a proper tool and lock the grounding terminal to the grounding hole in the lower right side of the inverter.

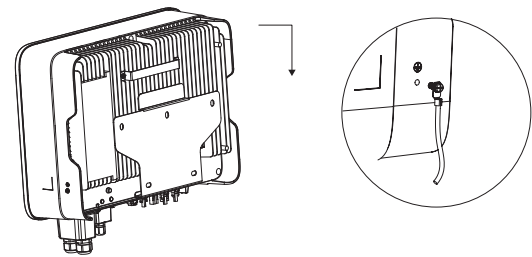


05 Electrical Wiring Diagram

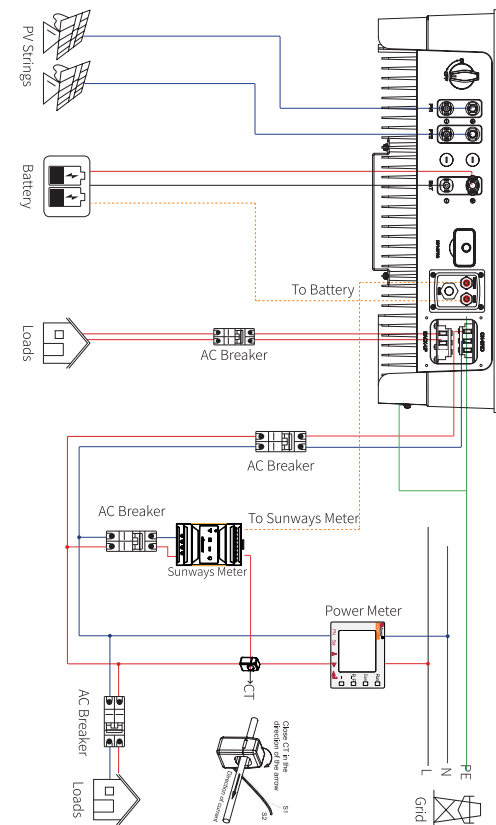


06 PV Connector Assembly Procedure and Connection

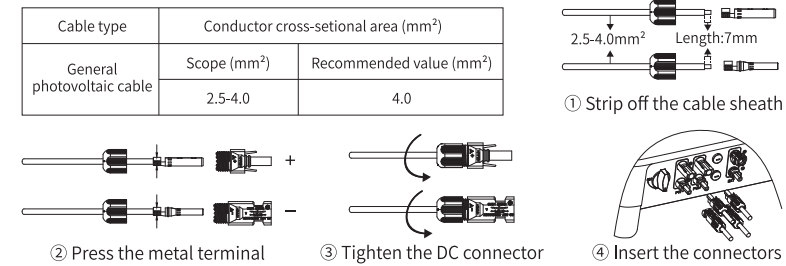


07 Inverter Battery Connector Assembly Procedure

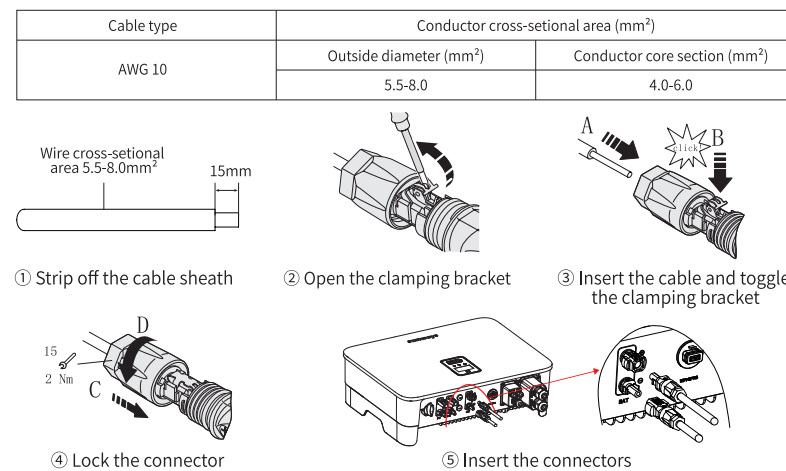

08 AC Output Connector Connection

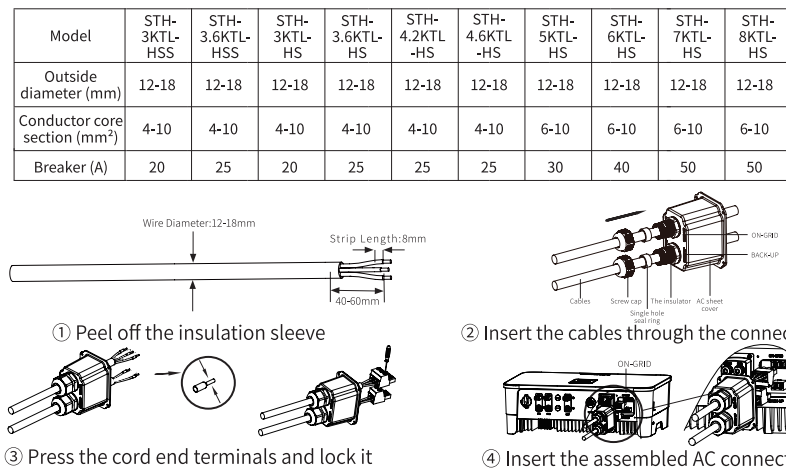

sunways

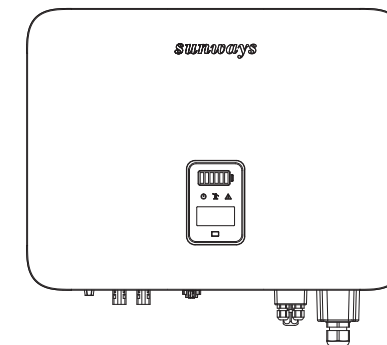

QUICK INSTALLATION GUIDE

STH 3~8 kW-HS Series
Single Phase Storage Inverter

Sunways Technologies Co.,Ltd.

Hotline: +86 400-9922-958


Website: www.sunways-tech.com

Address: No. 1, Second Road, Green Industrial Zone, Chongshou Town,
Cixi City, ZheJiang Province, PEOPLE'S REPUBLIC OF CHINA


S11-00035-00

Part 1 Inverter installation and wiring

01 Packing List

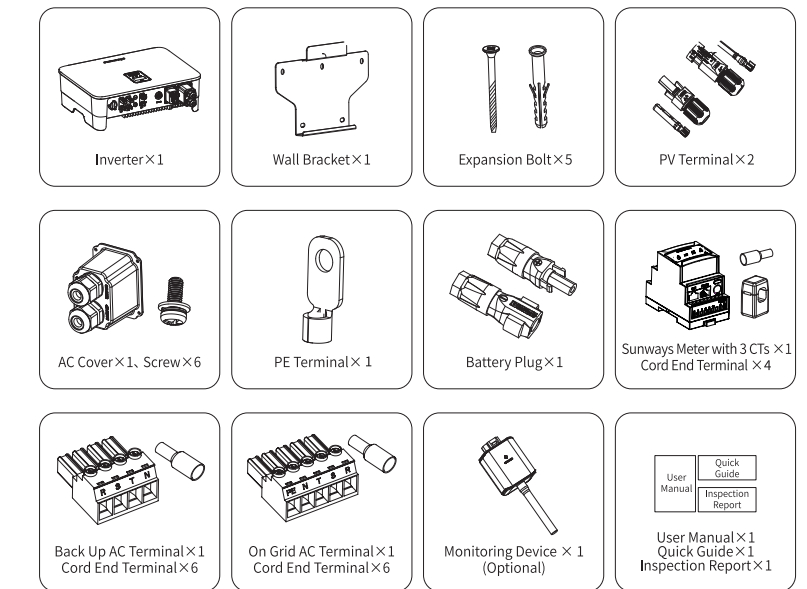

02 Installation Spacing and Angle

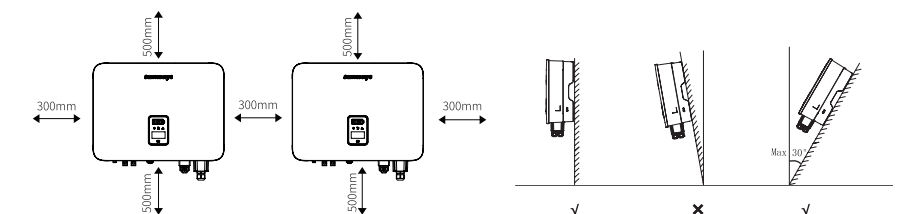

03 Wall bracket installation

